




YARP

Yet Another Robot Platform





Summary

- What is YARP?
- YARP Ports
- YARP Devices
- YARP Tools
- Other YARP features

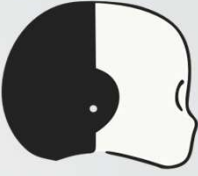

What is YARP?


Let's first ask to the question: Why?

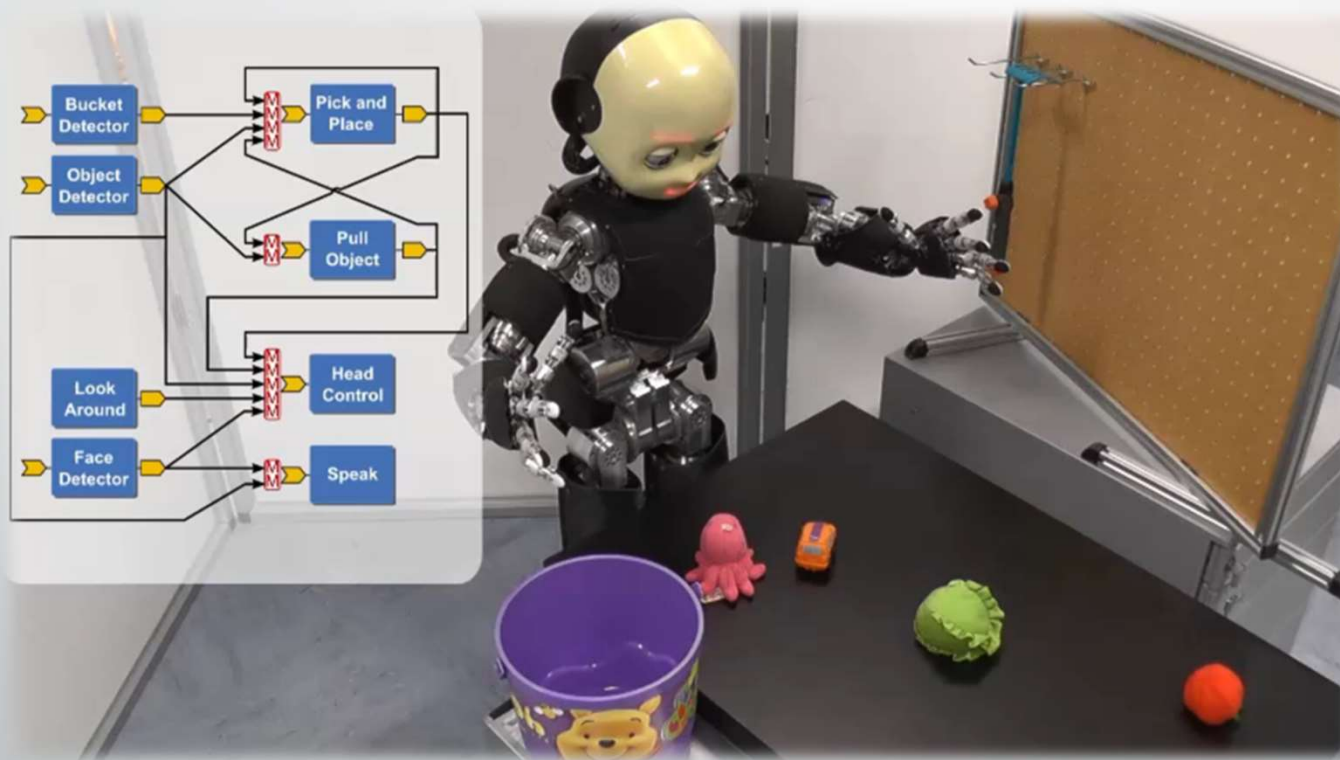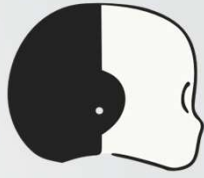



Why do we need a framework?


- Various scenarios and platforms
- Hardware changes in time
- Lots of different sensors
- Lack of standards
- Distributed processing
- Real-time friendly
- Algorithms/libraries/code changes in time
- Inherent complexity
- Distributed development
- Short life span of projects

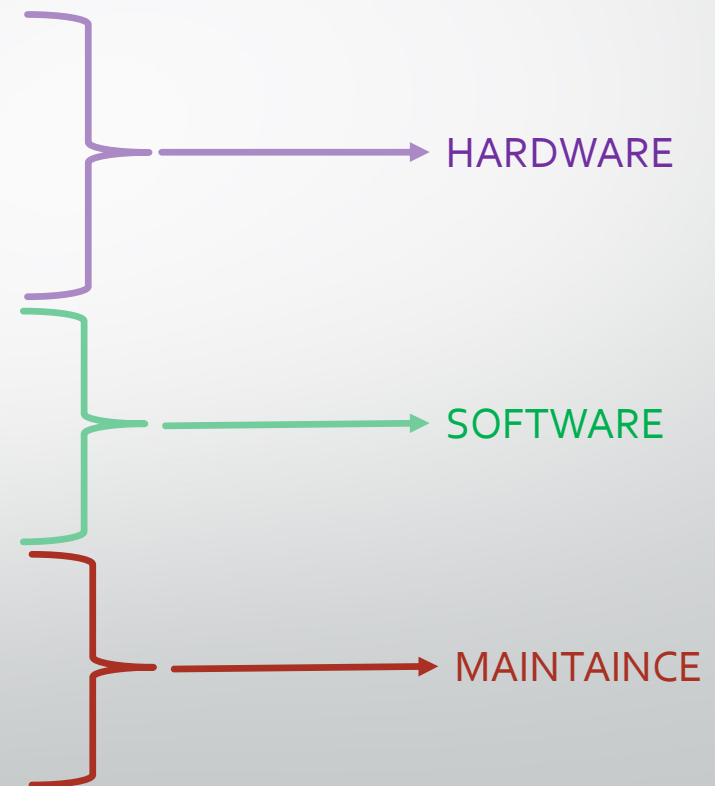




What is YARP?

YARP is a **middleware** aimed to ease the development of **high level application** for **robots** with a strong focus on **modularity, code re-usage, flexibility** and **hw/sw abstraction**.

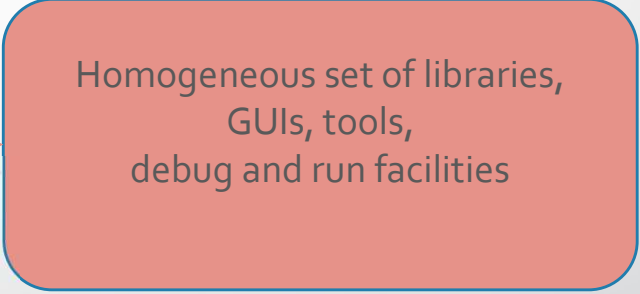

Homogeneous set of libraries,
GUIs, tools,
debug and run facilities

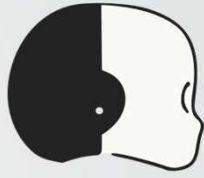

What is YARP?



YARP is a **middleware** aimed to ease the development of **high level application** for **robots** with a strong focus on **modularity**, **code re-usage**, **flexibility** and **hw/sw abstraction**.

YARP has been designed to support building robot control systems as **collection of executables** communicating in a **peer-to-peer** way, with an **extensible** types of connections (tcp, udp, multicast, local, MPI, mjpeg, XML/RPC, tcpros, ...).



YARP has been historically a C++ library targeting C++ users, but it has also bindings for high-level languages such as Python.

The strategic goal of this kind of design is to **increase the longevity of robot software projects**.

Typical application

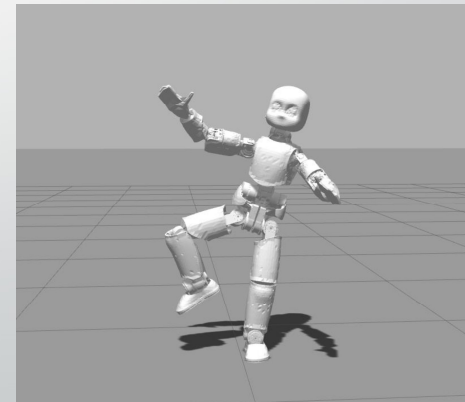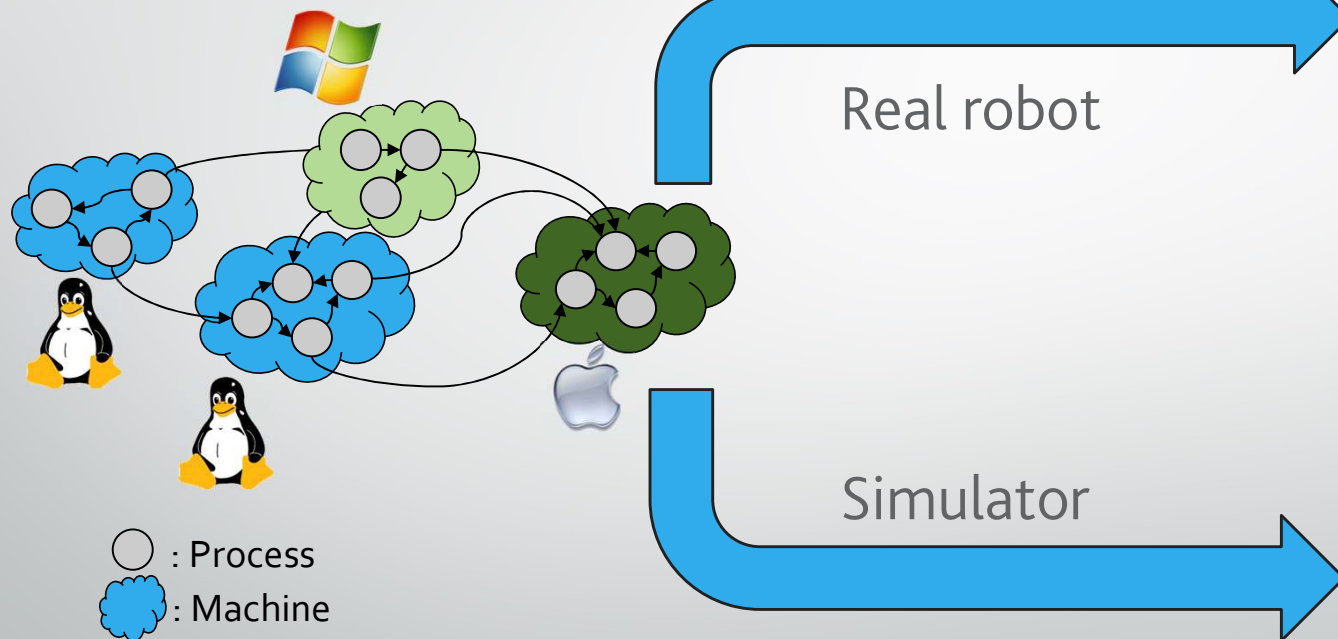

Who uses YARP

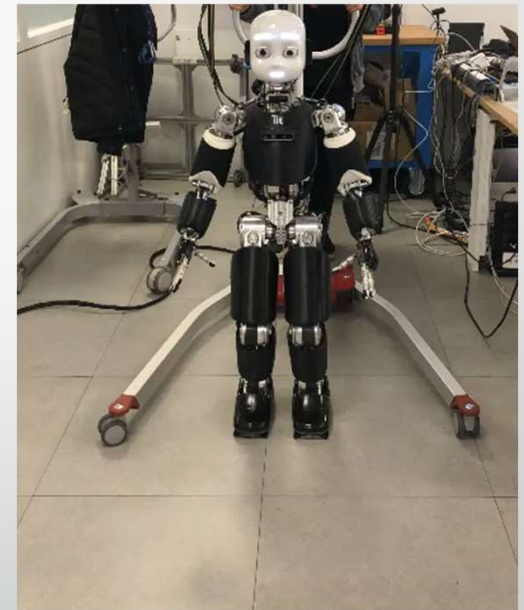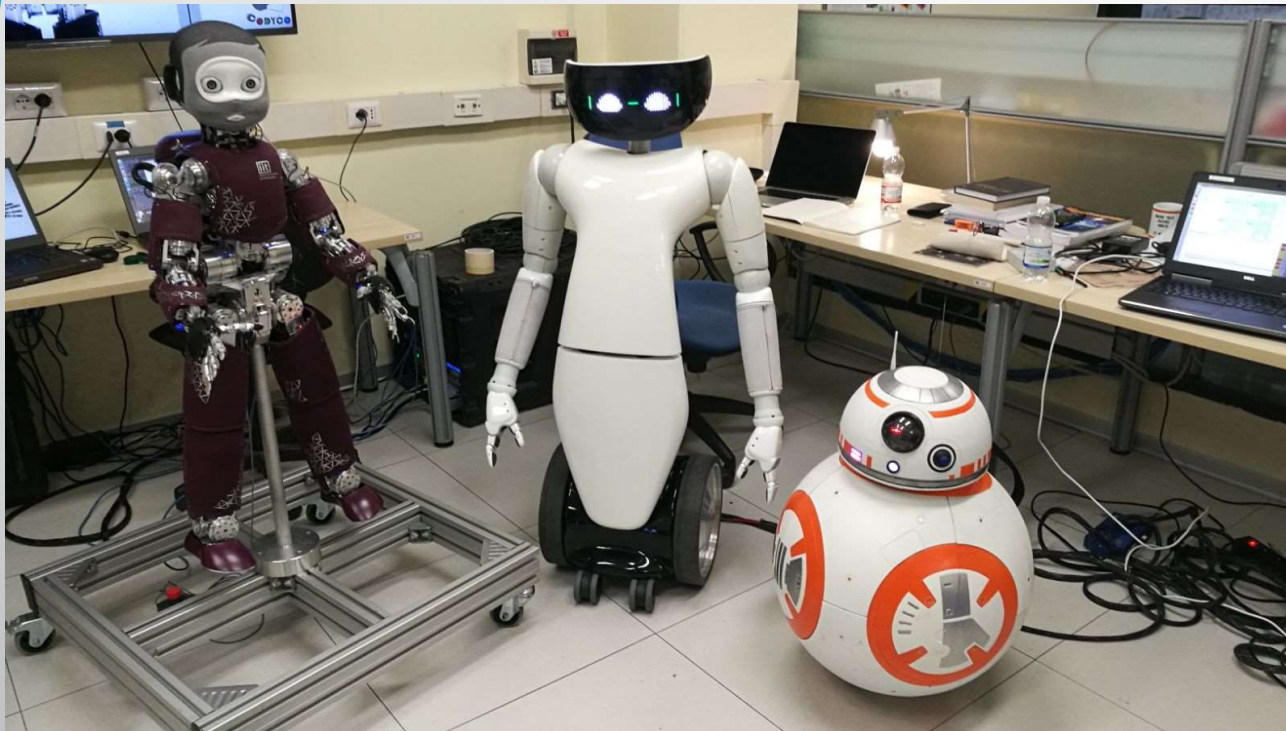


Other middleware



Cool!

“But what about **ROS**?”



ROS 2

Ports can be typed or not

Both topic and service are strongly typed

Multi-platform (also mobile, cross-compilation)

Mainly Ubuntu (ROS2 Linux and Windows)

Connection between ports are explicitly created

Topic and serves are implicitly connected based on their names

Different connections in the same system can use a different carrier (i.e. a different protocol)

In ROS₁, all connection use TCP. In ROS₂, you can change protocol, but all connections in the system must use the same protocol.

Smaller community

Huge and very active community


Not concerned with distribution of software (just a library)

Also include a binary distribution of software on the top of Debian/Ubuntu




YARP Ports

YARP Ports: How YARP communicates

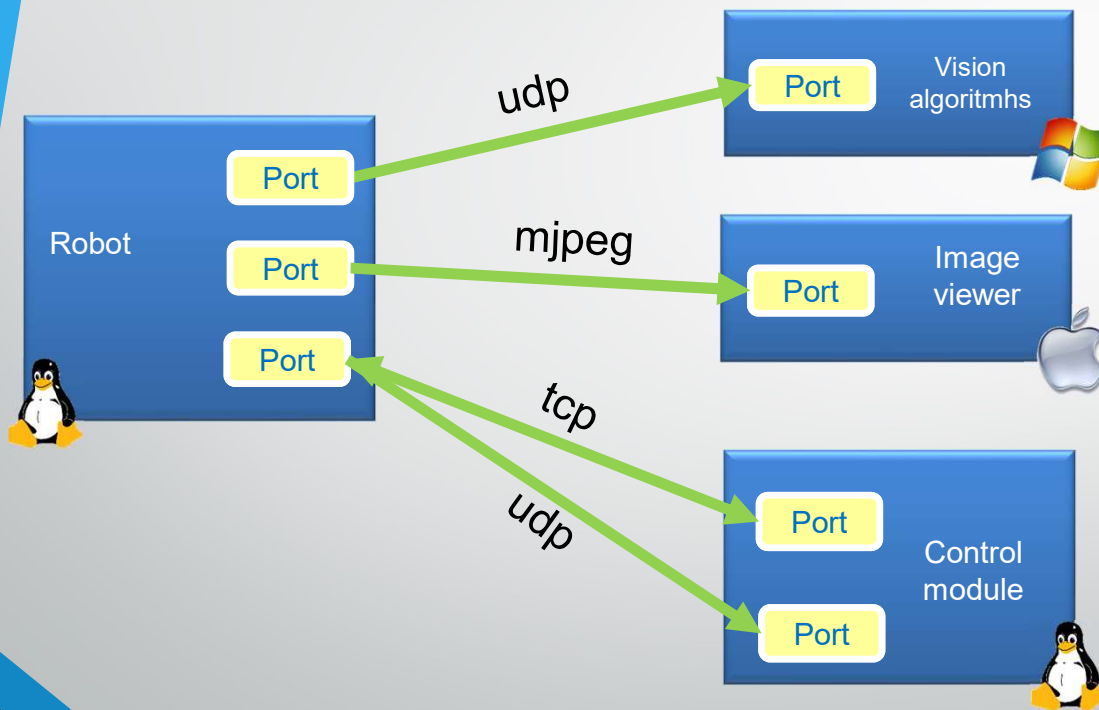


- YARP **ports** are the communication entry point.
- A port is a **bi-directional** communication entity.
- Many clients can connect to a port.
- Each connection can use different **protocols** or custom **carrier** to manipulate data on the fly.

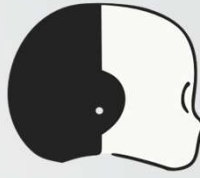

YARP Ports: How YARP communicates

YARP server acts as a DNS,
resolving yarp port names
into system sockets

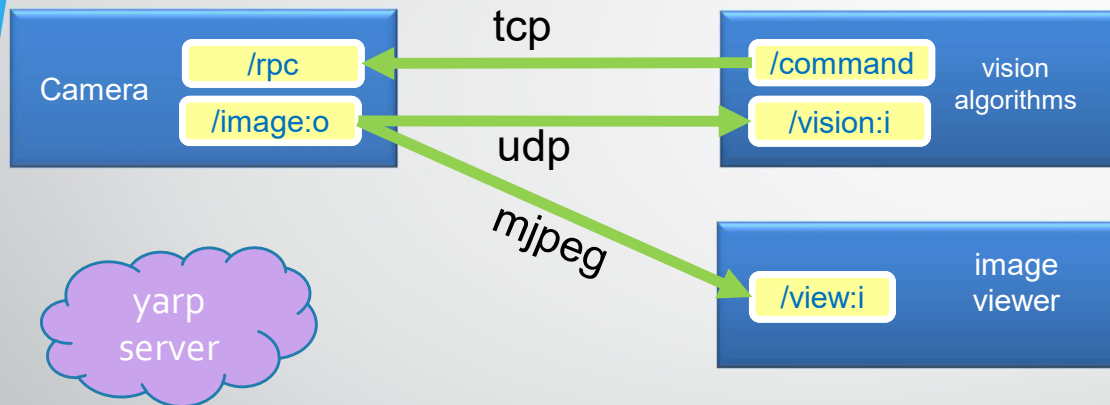


```
$ yarp name list

/image:o      192.168.1.1:10001
/vision:i     192.168.1.2:10002
/view:i       192.168.1.3:10003
/command      192.168.1.2:10004
/rpc          192.168.1.3:10005
```

yarp connect <source> <receiver> <carrier>(tcp)

```
$ yarp connect /command /rpc
$ yarp connect /image:o /vision:i udp
$ yarp connect /image:o /view:i mjpeg
```

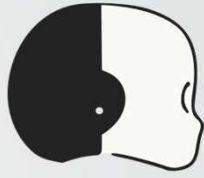


Data types

Data in YARP are **Portable** classes with **read** and **write** capabilities. This kind of classes can travel through the YARP network.

```
class MyData : public yarp::os::Portable
{
    // Portable interface toward YARP
    read(...) ;
    write(...) ;

    // Custom user methods for data handling
    fill_me() ;
    getData() ;

    // Usually for readability
    toString() ;
}
```

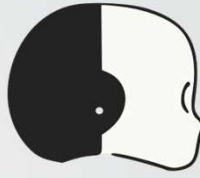

yarp::os::Value

Value is a container able to store in a uniform way a single instance of different basic data types.

Value can be queried to know its data type.

Data can be extracted in its native format with asXXX function.

```
class yarp::os::Value : public Portable
{
    Value(int x);           // Create an integer data.
    Value(double x);        // Create a floating point data.
    Value(std::string &str); // Create a string data.
    Value(void *data, int len); // Create a binary data.

    bool isInt32();
    bool isFloat64();
    bool isString();
    bool isBlob();

    int asInt32();           // Get integer value.
    double asFloat64();      // Get floating point value.
    std::string asString(); // Get string value.
    char* asBlob();          // Get binary data value.

    ...
}
```




yarp::os::Property

Dictionary type of data

Works in pair <key, data>, where

- Key is a string
- Data is a **yarp::os::Value**

Entry can be grouped together, with a key

Entry and group can be searched by the key

```
Property prop;  
prop.clear();
```

```
prop.put("myInt", 5);  
prop.put("myString", "Hello World");  
prop.put("myPi", 3.14);
```

```
Property &myGroup = prop.addGroup("group1");  
myGroup.put("g1", 2.5);  
myGroup.put("g2", "We have cookies");
```

```
prop.check("myInt");  
Value myInt = prop.find("myInt");  
double myPi = prop.find("myPi").asFloat64();  
Bottle &group = prop.findGroup("myGroup")
```



yarp::os::Bottle

Most flexible (but inefficient) type of data.

```
Bottle bot;  
bot.clear();
```

Can hold variable number of Value.

```
{ bot.addInt32(5);  
  bot.addString("hello");
```

Bottle can be appended or nested one into another.


```
{ Bottle& b1 = bot.addList();  
  b1.addFloat64(10.2);
```

A Property can be an element of a Bottle

```
{ Property &prop = bot.addDict();  
  prop.put("pib", "Help me");
```

Bottle can be accessed using indexes.
Size is the number of element you can get()

```
{ Value &v0 = bot.get(0);  
  Value &v1 = bot.get(1);
```

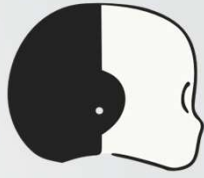

yarp::sig::ImageOf<PixelType>


Container for image type

Template working with many different pixel types

Full documentation here:

http://www.yarp.it/classyarp_1_1sig_1_1ImageOf.html

```
ImageOf<PixelRgb> yarpImage;  
yarpImage.resize(300,200);  
PixelRgb rgb;  
rgb = yarpImage.pixel(10, 20);
```

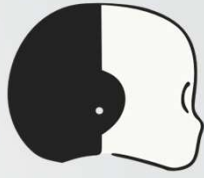

yarp::sig::PointCloud<DataType>

Container for point cloud type.

Template working with many different point types.

Moreover, it has been implemented to be compatible with Point Cloud Library (PCL) and with an interoperability between different point types.

Full documentation here:

http://www.yarp.it/yarp_pointcloud.html

```
PointCloud<DataXYZRGBA> yarpPointCloud;  
yarpPointCloud.resize(300,200);  
DataXYZRGBA point;  
point = yarpPointCloud(10, 20);
```



Working with Ports – Client/Server

Ports are identified by their name.

Constraints:

- Names must be unique
- Names must start with '/' character
- No '@' character allowed

Ideal for client/server pattern

```
yarp::os::Port myPort;  
myPort.open("/port");
```

```
Bottle b;  
myPort.read(b);  
int n = b.get(0).asInt32();  
n++;  
b.clear();  
b.addInt32(n);  
myPort.write(b);
```

```
myPort.close();
```




Working with Ports -- Streaming

In case of continuously broadcasted data (e.g. video streaming), a `yarp::os::BufferedPort<T>` can be used.

Main differences:

- Data type is fixed for port lifetime
- Memory creation/destruction is handled by the port
- Buffering policy can be set (default latest message is kept)
- A dedicated thread handles the read/write operations optimizing user thread cycle

```
BufferedPort<Bottle> port;  
  
port.open("/out");  
  
// Get memory to write into.  
Bottle& b = port.prepare();  
  
b.clear();  
  
b.addString("Hello world");  
  
port.write();  
  
port.close();
```

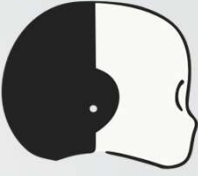

YARP Devices




YARP Devices: Hardware abstraction

- YARP **devices** are dynamically loaded C++ classes, that expose their functionalities
- They are used to model functionalities under common **interfaces**, such as sensors (cameras, IMUs, Force-Torques), low-level joint motor control, even if under the hood the **implementation** is different
- When you launch a robot like iCub, you launch a program `yarprobotinterface` that creates and runs several YARP devices to communicate with the low-level aspects of the robot.
- YARP **devices** are conceptually separated by YARP **ports**. You can have YARP **devices** that do not interact at all with YARP **ports**, even if historically have been strictly related.


YARP Devices: Hardware abstraction




Client & Server on the same machine

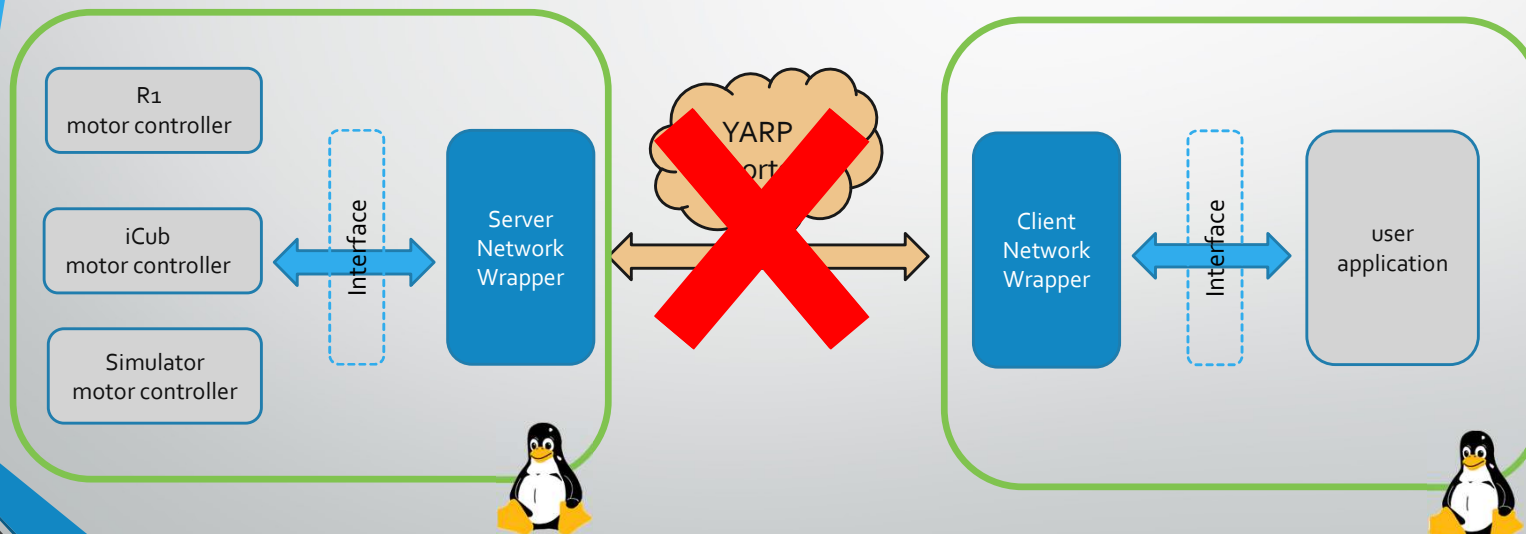


YARP Devices: Hardware abstraction

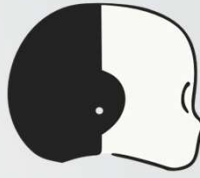

Client & Server on the same machine

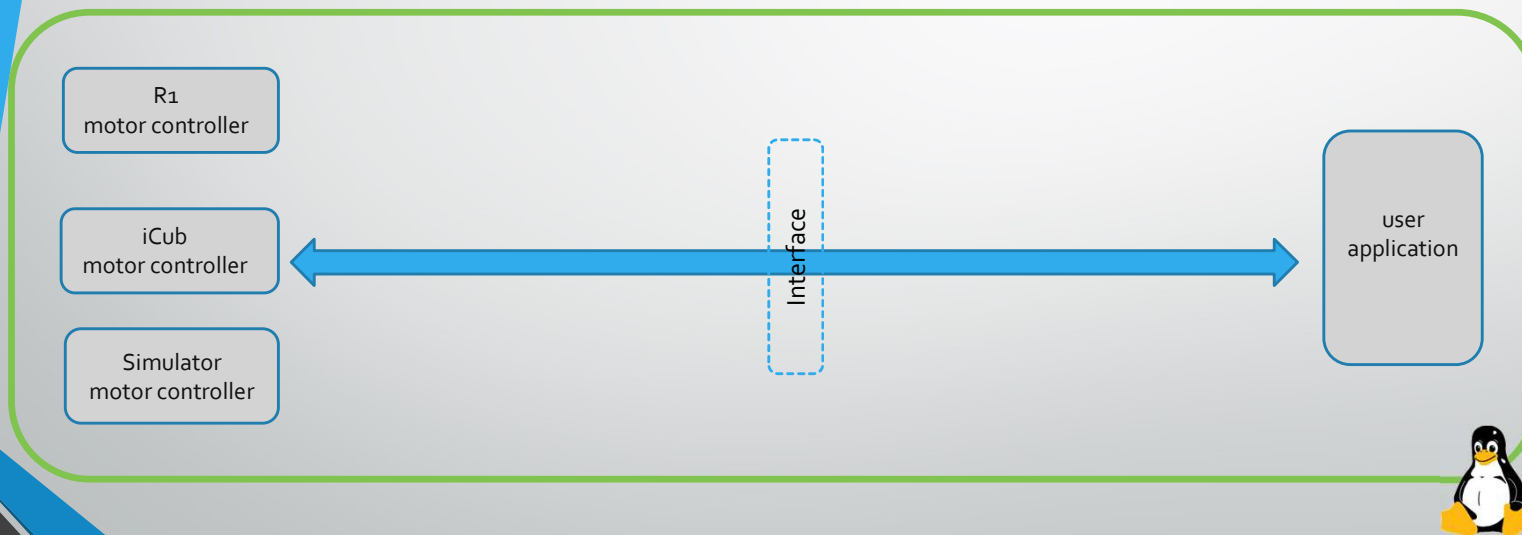

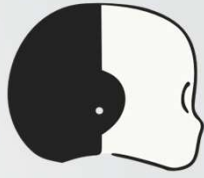


Interfaces

A class with pure virtual methods.

Servers provide functionalities by implementing required methods.

Clients use the functionalities by calling provided methods.

```
IPositionControl::getAxes() = 0;  
IPositionControl::positionMove(...) = 0;  
IPositionControl::relativeMove(...) = 0;  
IPositionControl::checkMotionDone(...) = 0;  
IPositionControl::setRefSpeed(...) = 0;  
IPositionControl::setRefAcceleration(...) = 0;  
IPositionControl::getRefSpeed(...) = 0;  
IPositionControl::getRefAcceleration(...) = 0;  
IPositionControl::getTargetPosition(...) = 0;  
IPositionControl::stop(...) = 0;
```

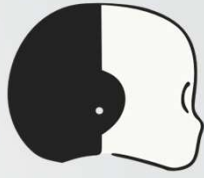

Opening a device

Devices are opened by mean of a special class called "**PolyDriver**".

PolyDriver is a polymorphic class which can turn into any device.

Keyword "device" tell YARP which device we really want to open.

All other parameters will be propagated to the specified device.

```
PolyDriver mystica;
```

```
Property config;
```

```
config.put("device", "device_type");  
config.put("deviceParam1", paramValue1);  
config.put("deviceParam2", paramValue2);  
...
```

```
mystica.open(config);
```



Remote Control Board

Device devoted to provide remote access to the robot motor control is the "remote_controlboard"

Required parameter to configure it are:

- Remote port prefix: remote
- Local port name: local

```
PolyDriver poly;
```

```
Property config;
```

```
config.put("device", "remote_controlboard");  
config.put("remote", "/icub/head");  
config.put("local", "<myApplication>");  
...
```

```
poly.open(config);
```

CONTINUE





Remote Control Board

Once opened, we need to specify which interface we want to work with.

To get a specific view of the device:

- create a pointer to the interface we want to use
- fill it by calling the `.view(...)` function

In case the device does not implement that interface, the pointer will be `nullptr`!

A device can implement more than one interface.

```
IPositionControl *posControl = nullptr;
```

```
poly.view(posControl);
```

```
if(!posControl)    // handle error
```

```
...
```

```
posControl->getAxes(...);
```

```
posControl->positionMove(...);
```


```
IEncoders *encs = nullptr;
```

```
IControlMode *controlMode = nullptr;
```

```
poly.view(encs);
```

```
poly.view(controlMode);
```

```
encs->getEncoders(...);
```

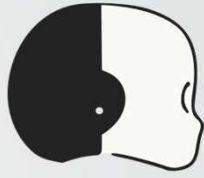

IPositionControl

Give access to main position control commands.

Used to send high level targets, with a velocity & acceleration profile.

For getters, memory must be allocated by user.

Units in YARP are SI compliant, except angles for controlboard, which are in degrees, degrees/s



IPositionControl

```
int joints;
posControl->getAxes(&joints);           // Get number of joints

posControl->setRefSpeed(0, 5);           // set a speed of 5 degrees/s for joint 0
posControl->positionMove(0, 30);        // move the joint 0 to +30 degrees

bool done = false;
do
{
    checkMotionDone(&done);             // this function checks the movement completion
}
while(!done);

posControl->positionMove(0, 0);          // reset joint position to 0
```




IEncoders

Permits to read joint encoders values


For getters, memory must be allocated by user.

Units in YARP are SI compliant, except angles for controlboard, which are in degrees, degrees/s



IEncoders

```
int joints;  
encs->getAxes(&joints);           // Get number of joints  
  
double singleJointEncoder;  
std::vector<int> allJointEncoders;  
allJointEncoders.resize(joints);  
  
encs->getEncoder(0, &singleJointEncoder); // Get position of joint 0  
encs->getEncoders(allJointEncoders.data()); // Get positions for all joints
```

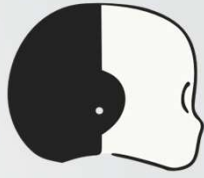


IControlMode

Permits to specify if a joint is controlled with a low level Position, Velocity or Torque control loop

For getters, memory must be allocated by user.

Units in YARP are SI compliant, except angles for controlboard, which are in degrees, degrees/s

More on this will be discussed in the Day 2 Training!

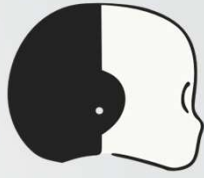

IControlMode

```
int joints;  
posControl->getAxes(&joints);           // Get number of joints  
  
int singleJointControlMode = VOCAB_CM_POSITION;  
std::vector<int> allJointControlModes;  
allJointControlModes.resize(joints);  
  
controlMode->setControlMode(0, singleJointControlMode); // Set position control mode of joint 0  
controlMode->getControlModes(allJointControlModes.data()); // Get control mode for all joints
```




YARP Command Line and GUI tools



YARP Command Line tools

- yarpserver: Launch the name server used to register YARP port names
- yarp: command-line utility "yarp" performs a set of useful operations for a YARP network.
 - yarp name list: list all known YARP ports.
 - yarp connect <src> <dst>: Connect the two specified YARP ports.
 - yarp detect: Searches for an activate yarpserver in the network.
 - See <https://www.yarp.it/latest/yarp.html> for all the available functionalities of yarp command
- yarprobotinterface: Launch a group of devices as a single process, typically used when you launch a robot
- yarpdatadumper: Dump the data connected to a port on a file.
- See https://www.yarp.it/latest/#yarp_command_line_tools for a the complete list of tools

YARP GUI: YARP manager

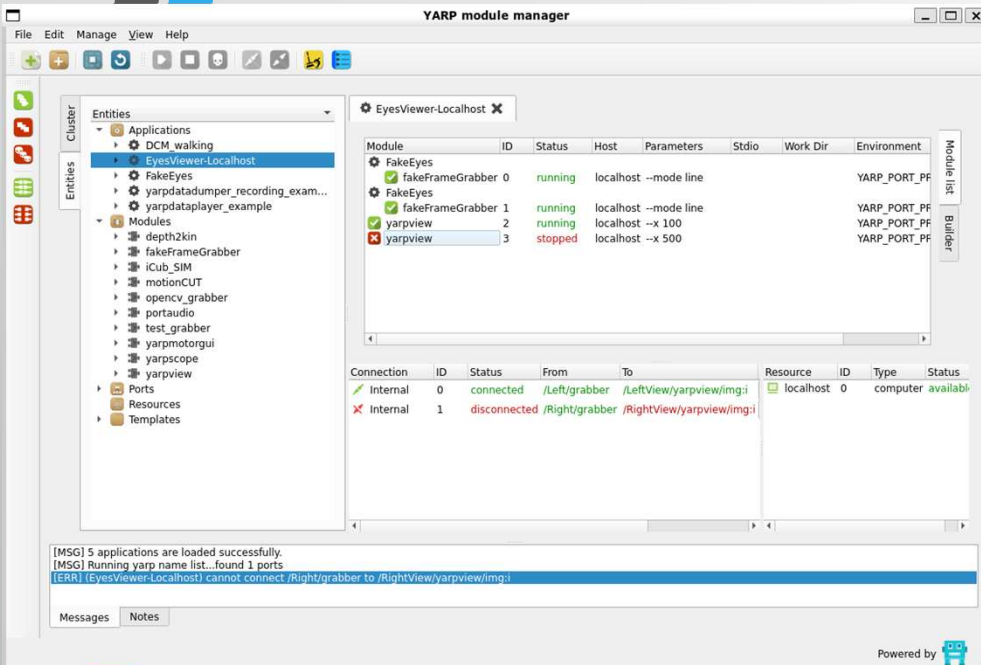


yarpmanager is a tool for running and managing multiple programs on a set of machines.

- The **programs/executables** that can be launched are called “**modules**” and are grouped in “**applications**”, that are specified by XML files.
- Specific demonstration on the iCub are launched via appropriate **yarpmanager** applications
- The programs launched by yarpmanager do not need to use YARP to be used via yarpmanager, you can launch YARP independent programs, Bash scripts or Python commands.
- <https://www.yarp.it/latest/yarpmanager.html>



YARP GUI: YARP view

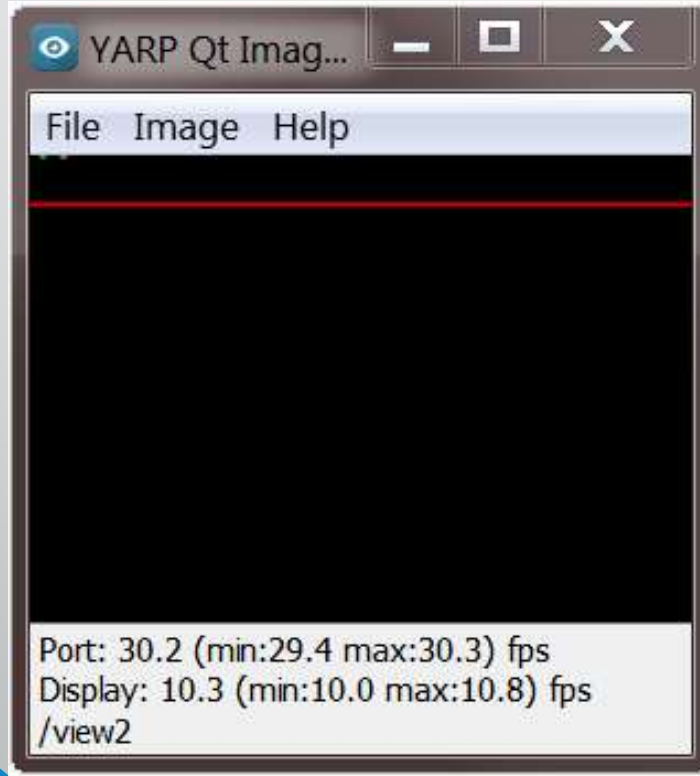


yarpview is a graphical interface for viewing images transmitted on the YARP network.

- A typical use of yarpview is to spawn two of them via yarpmanager to visualize the two eyes cameras of iCub.
- <http://www.yarp.it/latest/yarpview.html>




Other YARP features

- ResourceFinder
 - Infrastructure that specifies where configuration and data files are installed and searched, to permit to easily have different configuration files for different experiments or robots.
 - http://www.yarp.it/git-master/yarp_resource_finder_tutorials.html
 - https://github.com/vvv-school/tutorial_RFModule-simple
- Carriers:
 - Communicate across ports via mjpeg, h264, unix socket, portmonitor, shared memory, ROS
- Bindings:
 - Support via SWIG for Python, Lua, Ruby, C#, MATLAB/Octave.
 - http://www.yarp.it/latest/yarp_swig.html

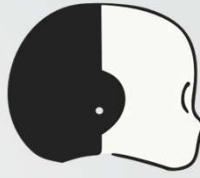

YARP - ROS compatibility

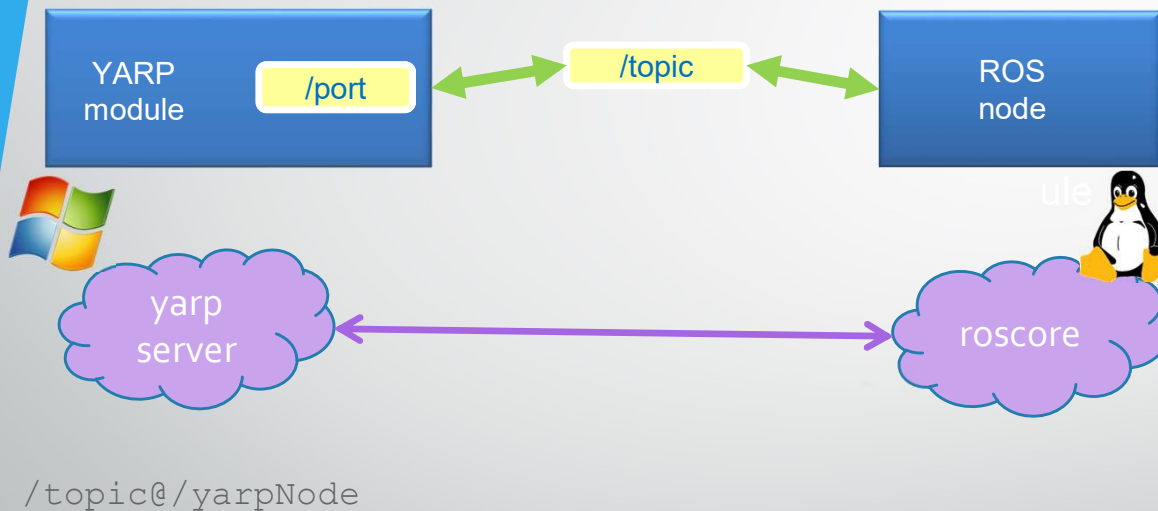

YARP ask roscore to establish a new connection

YARP loads a specific carrier to convert data into ROS-like **type on the fly**

No need to have ROS installed

https://www.yarp.it/latest/yarp_with_ros.html

THANKS FOR THE
ATTENTION!

